


Legend:

- 1: Viking Vapour Barrier VWR725 required for Climate Zone 3
- 2: Viking PIR Polyiso Insulation sheet
- 3: Viking CoverBoard 10mm
- 4: Viking Waterproofing Membrane System
- 5: **Viking Buzon Pedestal**
- 6: *Timber Joist or Bearer
- 7: Timber decking

5: **Viking Buzon Pedestal with Buzon Batten Holder** to support joist for timber decking
 limitations for centres of Buzon pedestals is dependant on joist size
 We would suggest spacing the pedestals within the following centres
 70x45mm @ .700mt apart
 90 x 45mm @ 1mt apart
 *Designer or builder should refer to NZS3604 for timber sizing vs spans

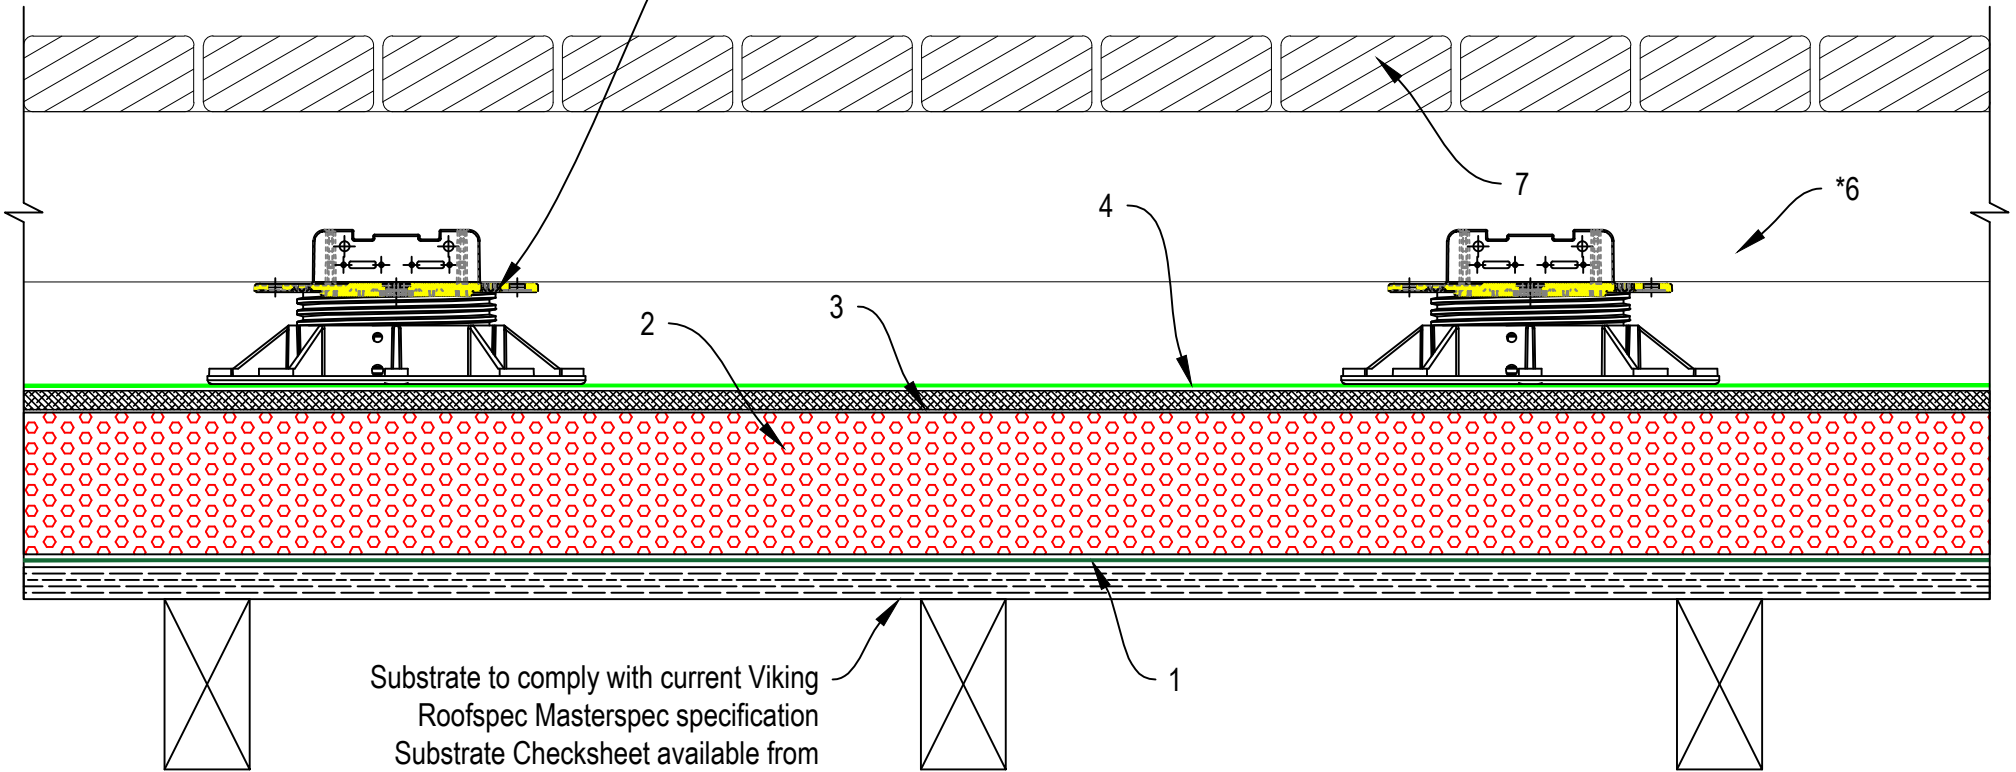

Substrate to comply with current Viking
 Roofspec Masterspec specification
 Substrate Checksheet available from
www.vikingroofspec.co.nz



DRAWING TITLE
Viking Buzon Timber Decking over WarmRoof

NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 22/03/2017	Detail Ref.	ISSUE
DRAWN	Viking	BZ06	A