


NOTE: How many vents?
Refer Viking Technical Note Venting .

NOTE: Refer TOR_004 for Direction of Plinth to watershed

NOTE:
Ensure cross-ventilation within the roof structure
E.G. use of a Castellated Batten directly under the Ply substrate or drill 20mm holes at top of timber supports

NOTE: Venting not required if specifying Viking WarmRoof or WarmSpan systems

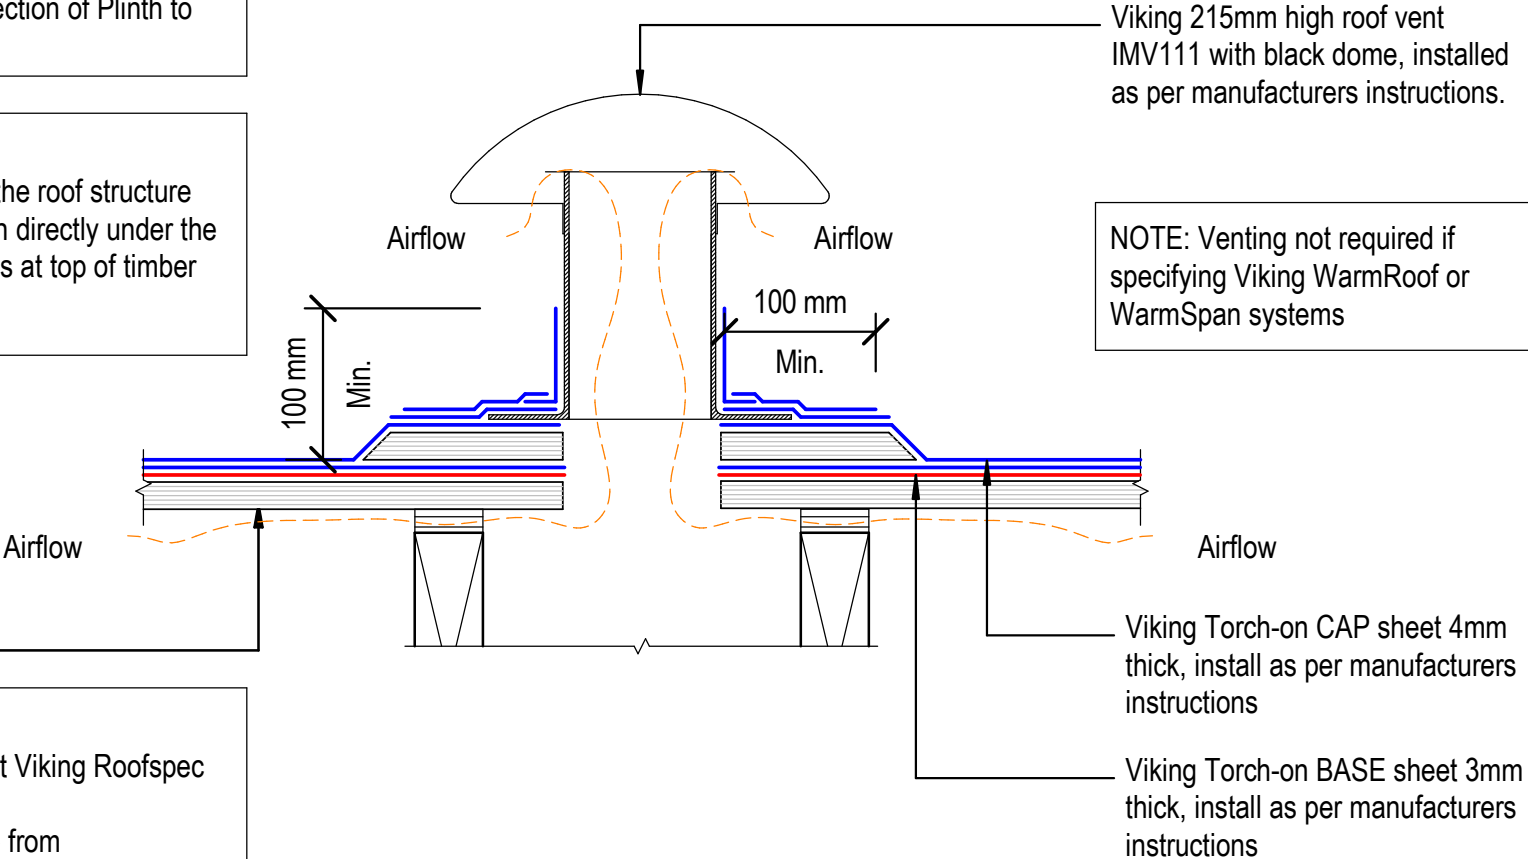

NOTE:
Substrate to comply with current Viking Roofspec Masterspec specification
Substrate Checksheet available from www.vikingroofspec.co.nz

DRAWING TITLE

Viking Torch-On
Ventilation_Cavity Vent

NOTES:

- Viking Waterproof Membrane as notated can be Viking Gemini, Lybra or Phoenix Super.
- All fixings, cladding and structure are indicative only unless notated.

CodeMark

Cert # GM-CMNZ30092
Cert # BV-CMNZ70171
Viking Torch-On systems are CodeMarked

DRAWING

INFORMATION ONLY

Scale:	Date:	Drawn:	Viking
Not to Scale	23/11/2020		
Detail Ref:			VIK_TOR_020_VENTCAVI