


Legend:

- 1: Viking Waterproofing Membrane System
- 2: **Viking Buzon Pedestal**
- 3: *Timber Joist or Bearer
- 4: Timber decking

2: **Viking Buzon Pedestal with Buzon Batten Holder** to support joist for timber decking
 limitations for centres of Buzon pedestals is dependant on joist size
 We would suggest spacing the pedestals within the following centres
 70x45mm @ .700mt apart
 90 x 45mm @ 1mt apart
 *Designer or builder should refer to NZS3604 for timber sizing vs spans

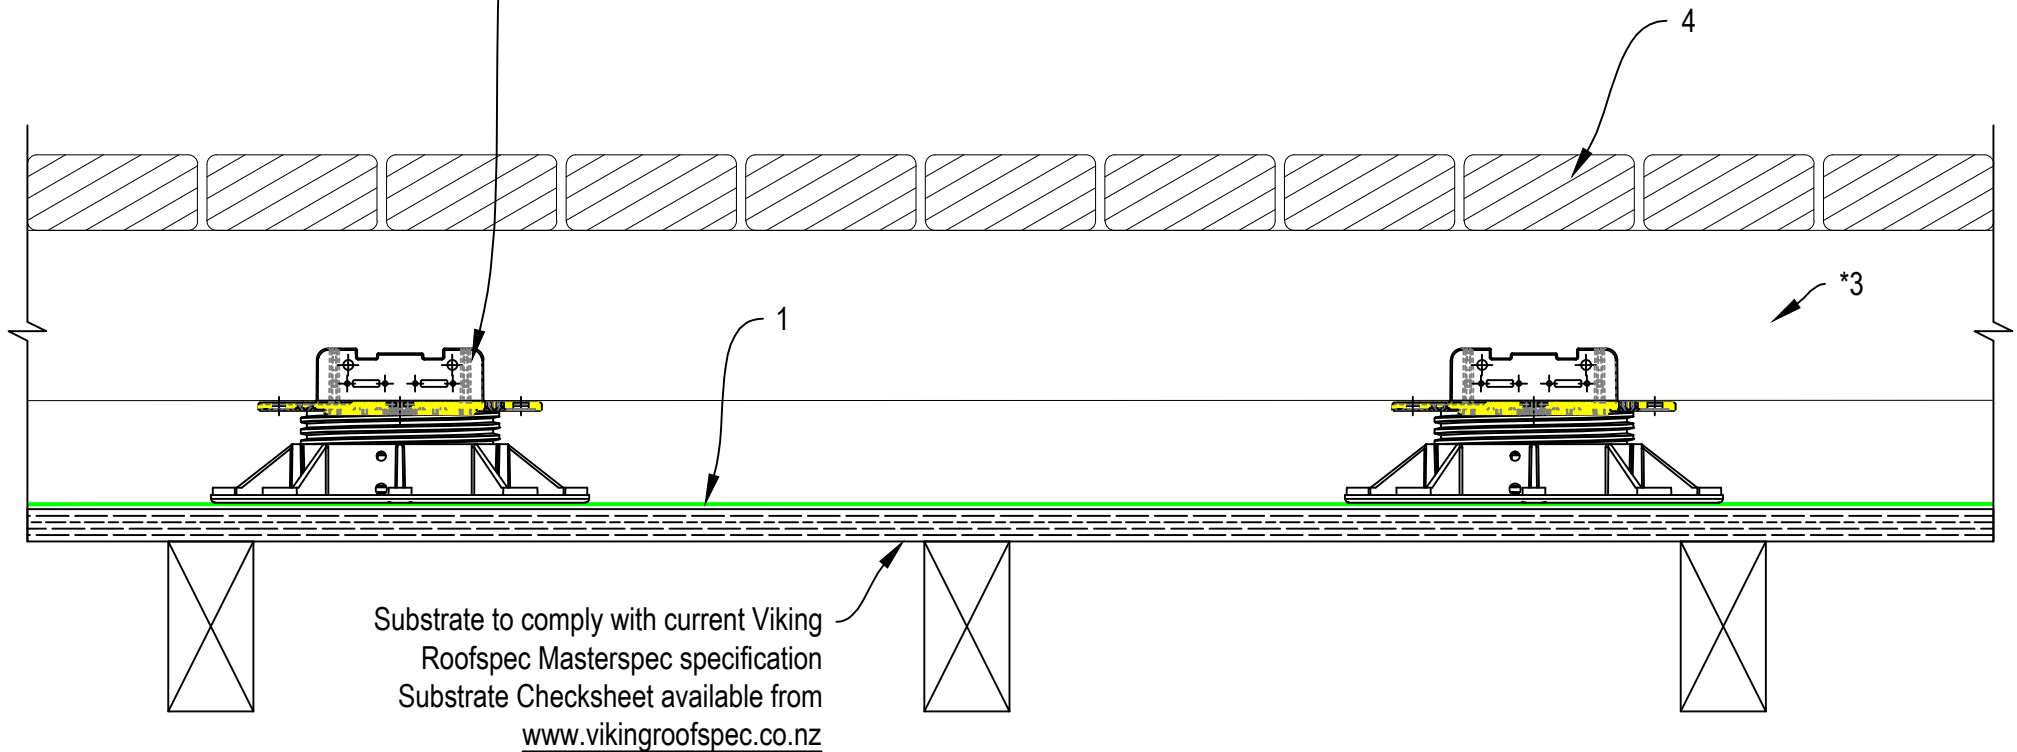

DRAWING TITLE
Viking Buzon Supporting Timber Decking

NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 22/03/2017	Detail Ref.	ISSUE
DRAWN	Viking	BZ05	A