


DRAWING TITLE
Viking Buzon Typical detail for Cavity Wall BZ01

NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 13/06/2016	Detail Ref.	ISSUE
DRAWN	Viking	BZ01	A

'Z' = Variable according to wind zoning.

Please refer to table 7 page 39 E2/AS1

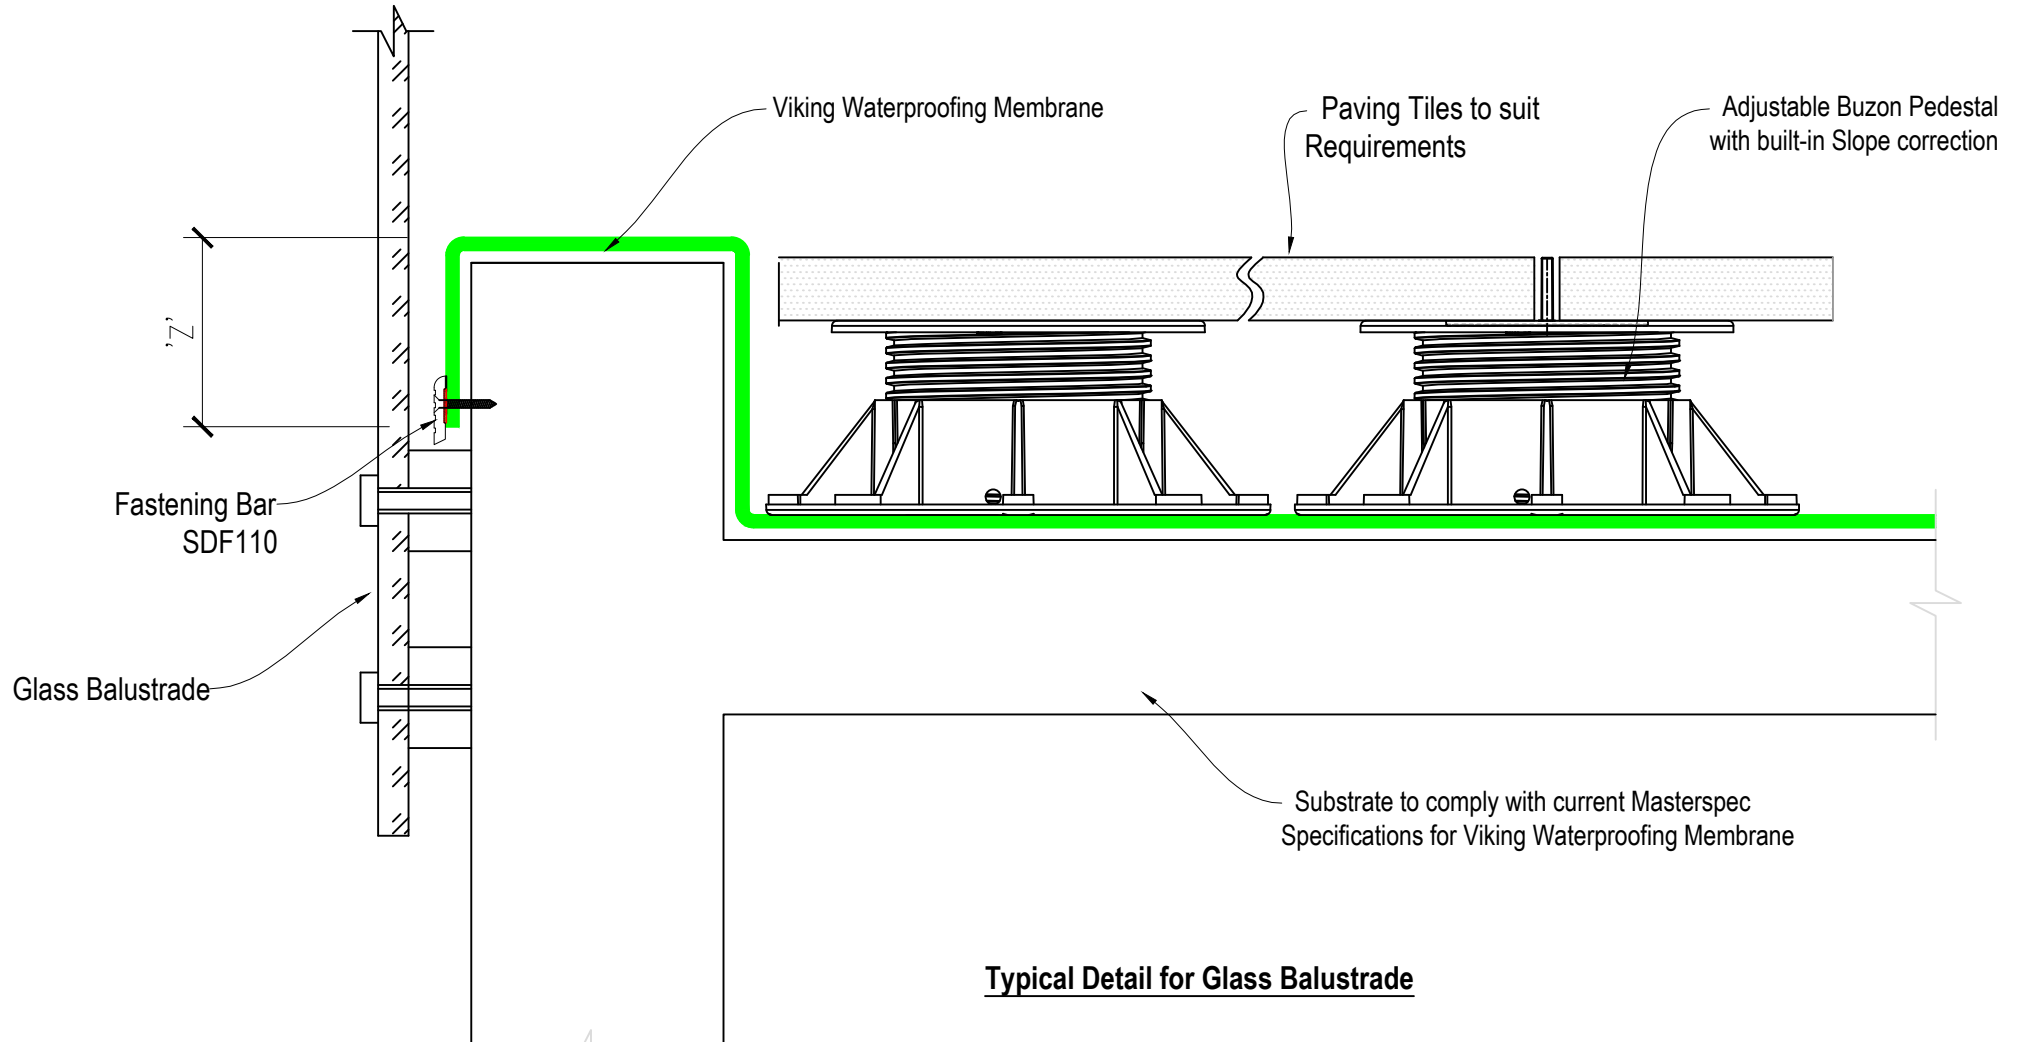


Typical Detail for Glass Balustrade




DRAWING TITLE
Viking Buzon Typical detail for Glass Balustrade BZ02

NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 13/06/2016	Detail Ref.	ISSUE
DRAWN	Viking	BZ02	A

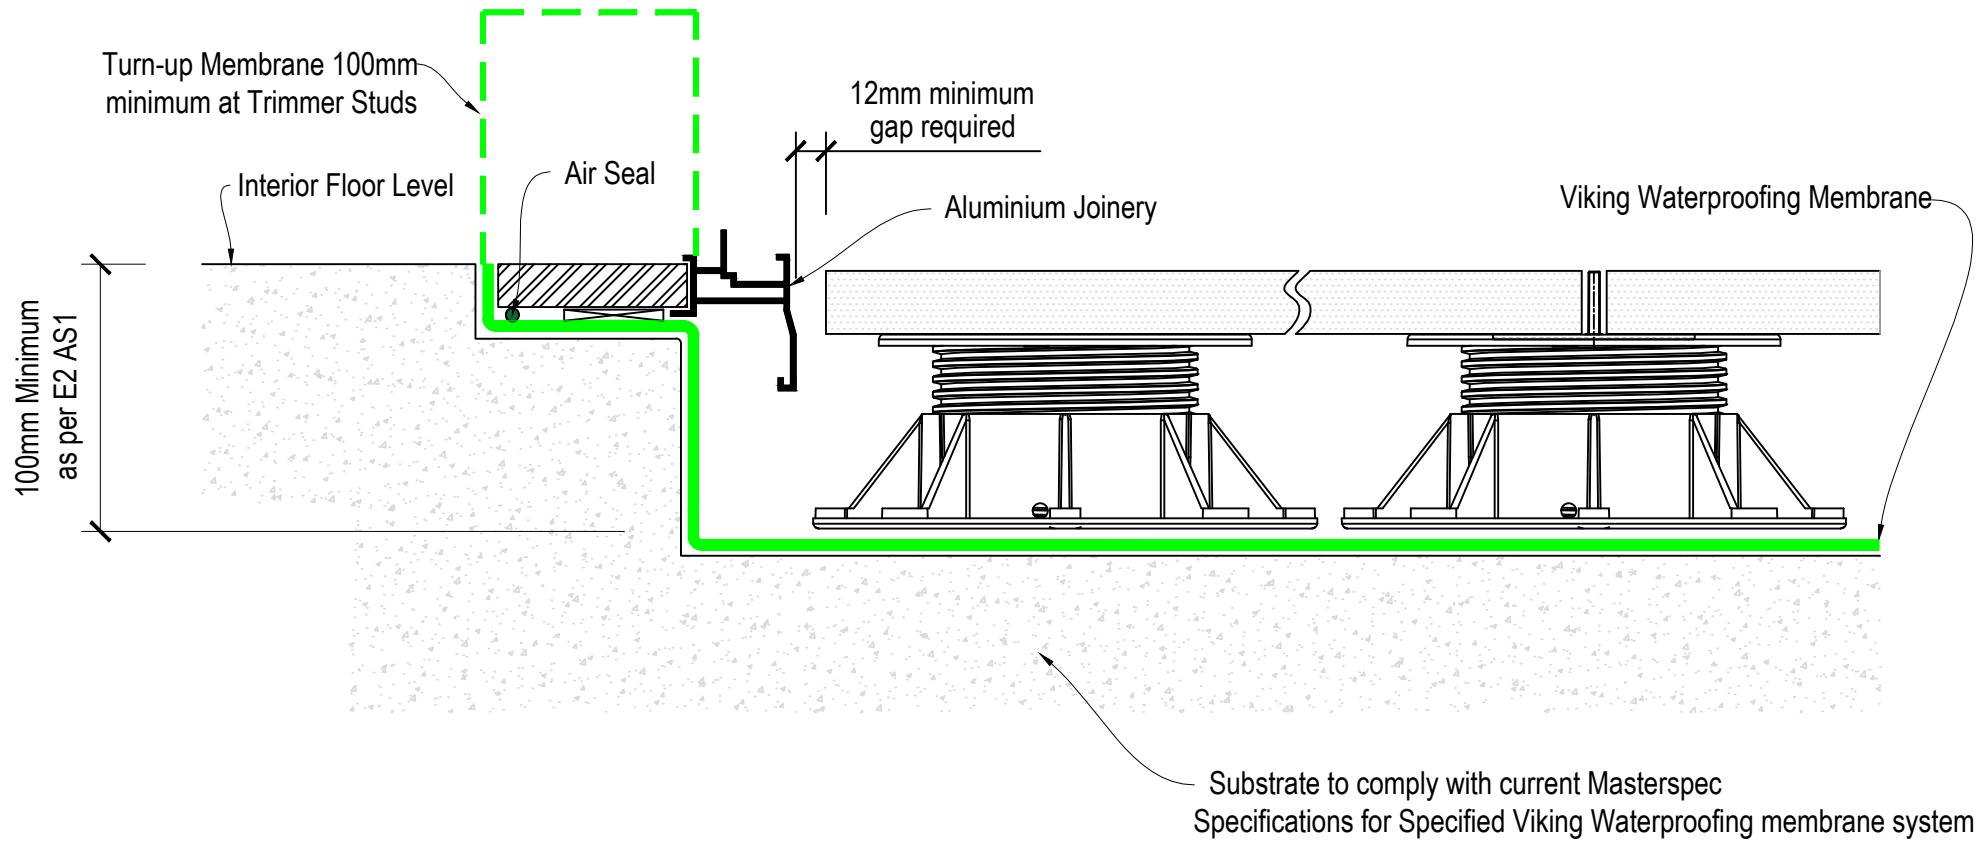

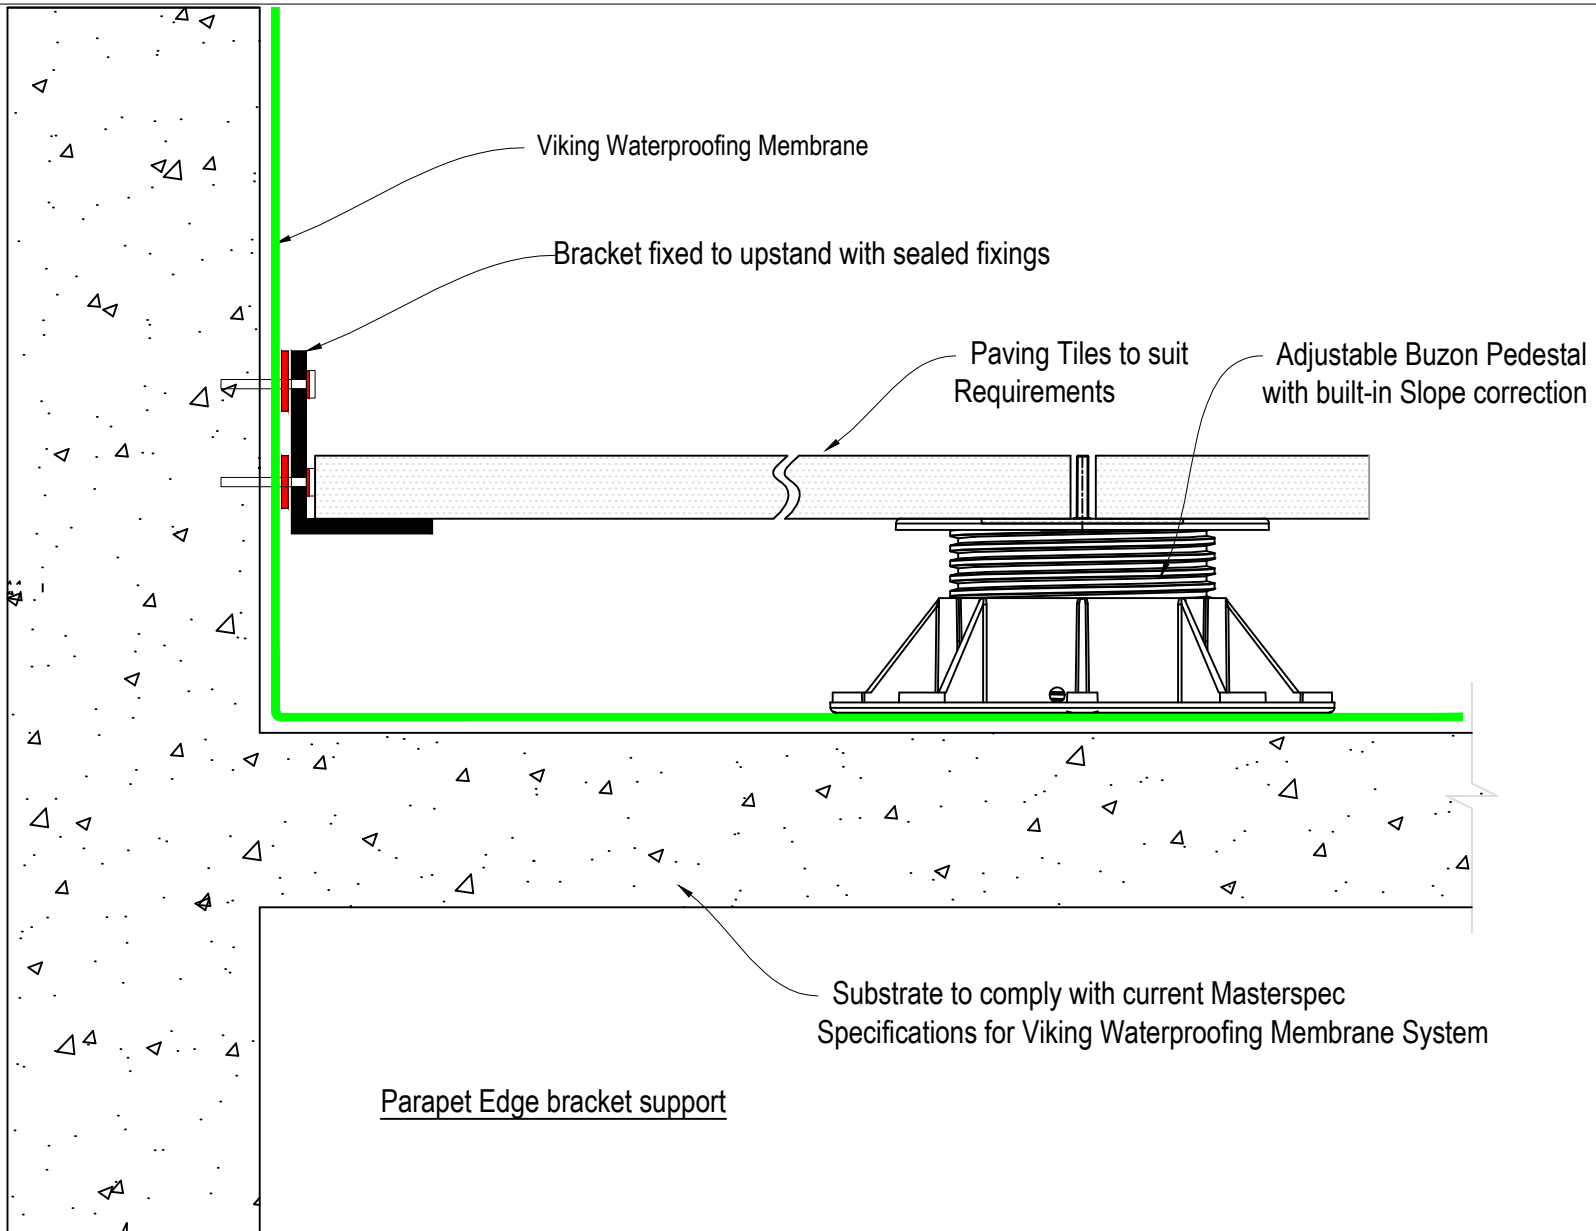

DRAWING TITLE
Viking Buzon Parapet bracket support


NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 22/03/2017	Detail Ref.	ISSUE
DRAWN	Viking	BZ04	A

Legend:

- 1: Viking Waterproofing Membrane System
- 2: **Viking Buzon Pedestal**
- 3: *Timber Joist or Bearer
- 4: Timber decking

2: **Viking Buzon Pedestal with Buzon Batten Holder** to support joist for timber decking
 limitations for centres of Buzon pedestals is dependant on joist size
 We would suggest spacing the pedestals within the following centres
 70x45mm @ .700mt apart
 90 x 45mm @ 1mt apart
 *Designer or builder should refer to NZS3604 for timber sizing vs spans

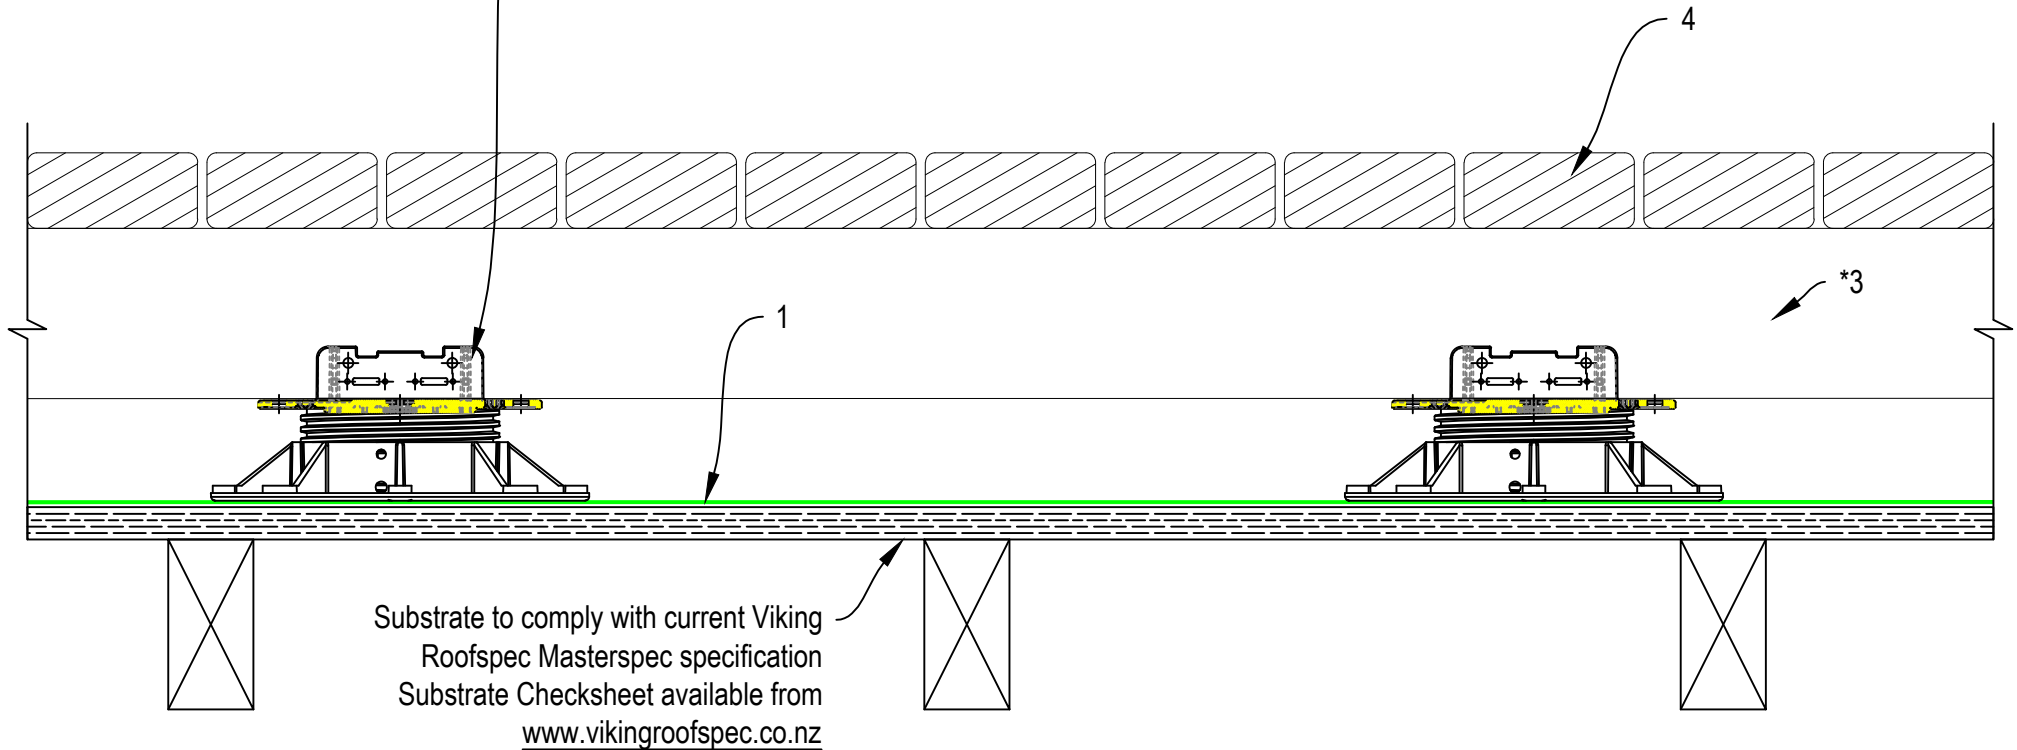

DRAWING TITLE
Viking Buzon Supporting Timber Decking


NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 22/03/2017	Detail Ref.	ISSUE
DRAWN	Viking	BZ05	A

Legend:

- 1: Viking Vapour Barrier VWR725 required for Climate Zone 3
- 2: Viking PIR Polyiso Insulation sheet
- 3: Viking CoverBoard 10mm
- 4: Viking Waterproofing Membrane System
- 5: **Viking Buzon Pedestal**
- 6: *Timber Joist or Bearer
- 7: Timber decking


5: **Viking Buzon Pedestal with Buzon Batten Holder** to support joist for timber decking
 limitations for centres of Buzon pedestals is dependant on joist size
 We would suggest spacing the pedestals within the following centres
 70x45mm @ .700mt apart
 90 x 45mm @ 1mt apart
 *Designer or builder should refer to NZS3604 for timber sizing vs spans

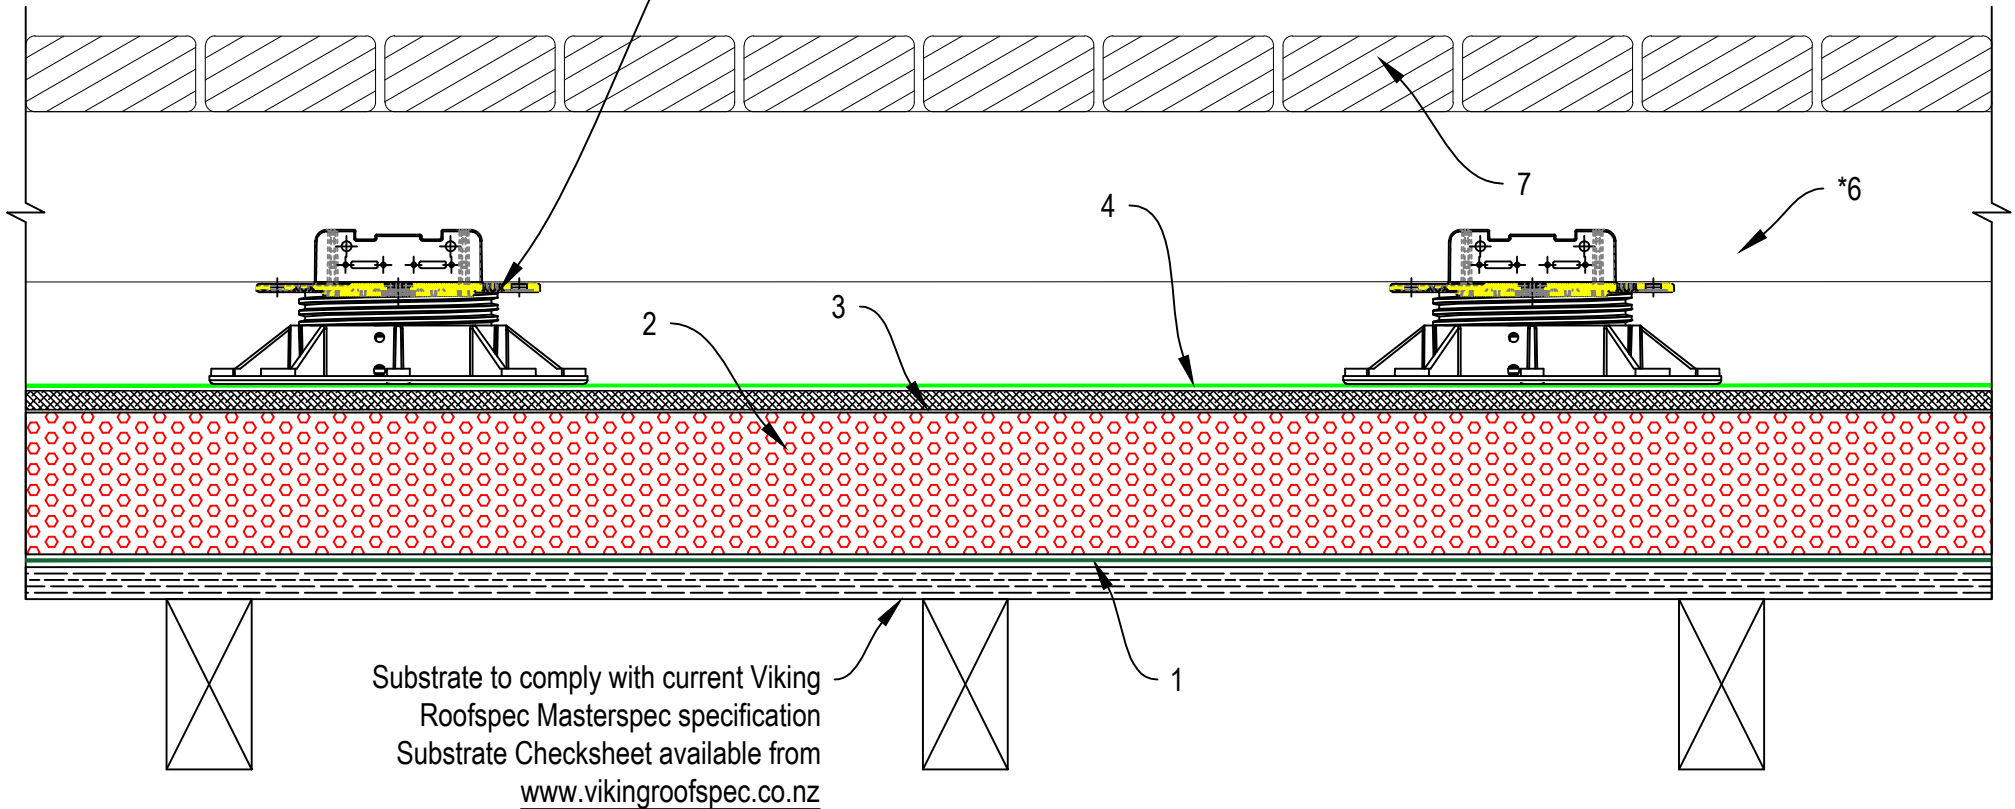


DRAWING TITLE
Viking Buzon Timber Decking over WarmRoof

NOTES:
Substrate Indicative Only


DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 22/03/2017	Detail Ref.	ISSUE
DRAWN	Viking	BZ06	A




Buzon PH5000 slope correction 0 - 5%
add to DPH000 / DPH100 / DPH200
adds 10mm of height




Buzon Batten Holder
to support 65mm wide joist




A17000 Tile Tab 4.5mm spacer
Add to each pedestal if supporting Tile or Pavers




Buzon DPH000 17mm




Buzon DPH100 28mm

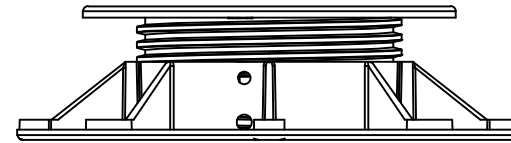


Buzon DPH200 35 - 53mm

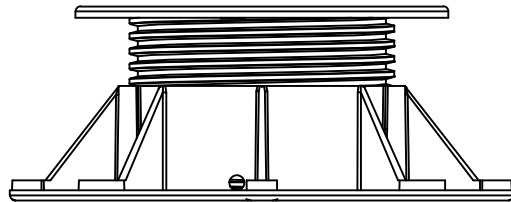


Buzon DPH300 50 - 78mm

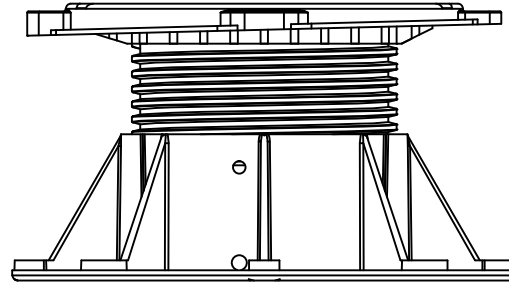

Buzon DPH400 74 - 110mm

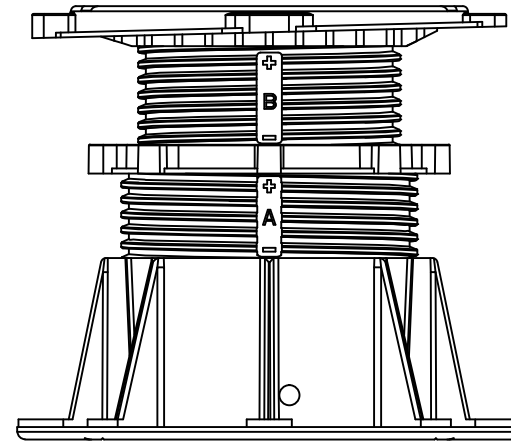

Buzon DPH500 100 - 170mm

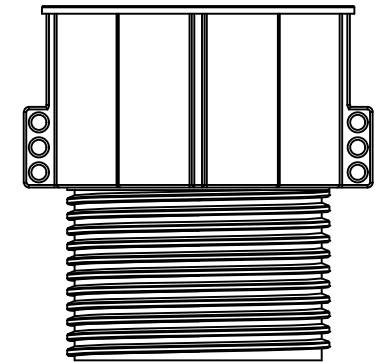

Buzon Coupler / extension
adds 120mm height