


NOTE:
 Substrate to comply with current
 Viking Roofspec Masterspec
 specification
 Substrate Checksheet available
 from www.vikingroofspec.co.nz

Refer detail TOR_070

Purlin over trusses

Continue membrane onto a 300mm
 wide flood-board down to the
 bottom drip-edge and Spouting.
 Form a hemmed edge along the
 membrane, under metal roofing

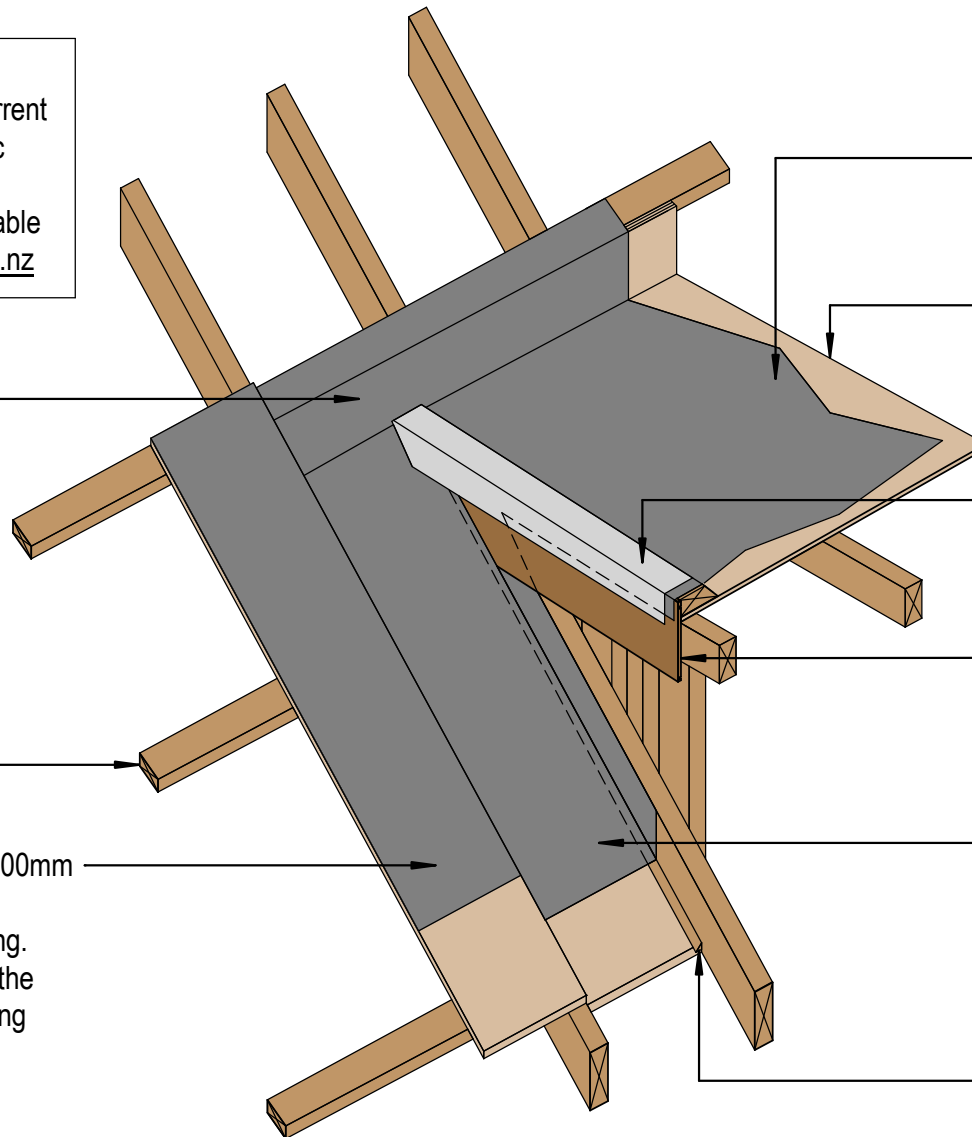

Viking Torch-on system,
 install as per manufacturers
 instructions.

Substrate

Refer detail TOR_074A
 Install membrane before Barge-board
 is installed, then addition membrane to
 finish over the Barge-board and / or
 install a metal cap.

Barge board

Viking Torch-on membrane into
 gutter, return membrane up wall
 and behind cladding 150mm Min.
 upstand, continue membrane
 behind barge board

Fillet

DRAWING TITLE

Viking Torch-On
 Roof Junction_Dormer ISO

NOTES:

- Viking Waterproof Membrane as notated can be Viking Gemini, Lybra or Phoenix Super.
- All fixings, cladding and structure are indicative only unless notated.

CodeMark

Cert # GM-CMNZ30092

Cert # BV-CMNZ70171

Viking Torch-On systems are CodeMarked

DRAWING

INFORMATION ONLY

Scale: Not to Scale Date: 23/11/2020 Drawn: Viking

Detail Ref: **VIK_TOR_074_RJUNDORM**

Viking Roofspec
 Taking care of detail