


NOTE:
 Substrate to comply with current
 Viking Roofspec Masterspec
 specification
 Substrate Checksheet available
 from www.vikingroofspec.co.nz

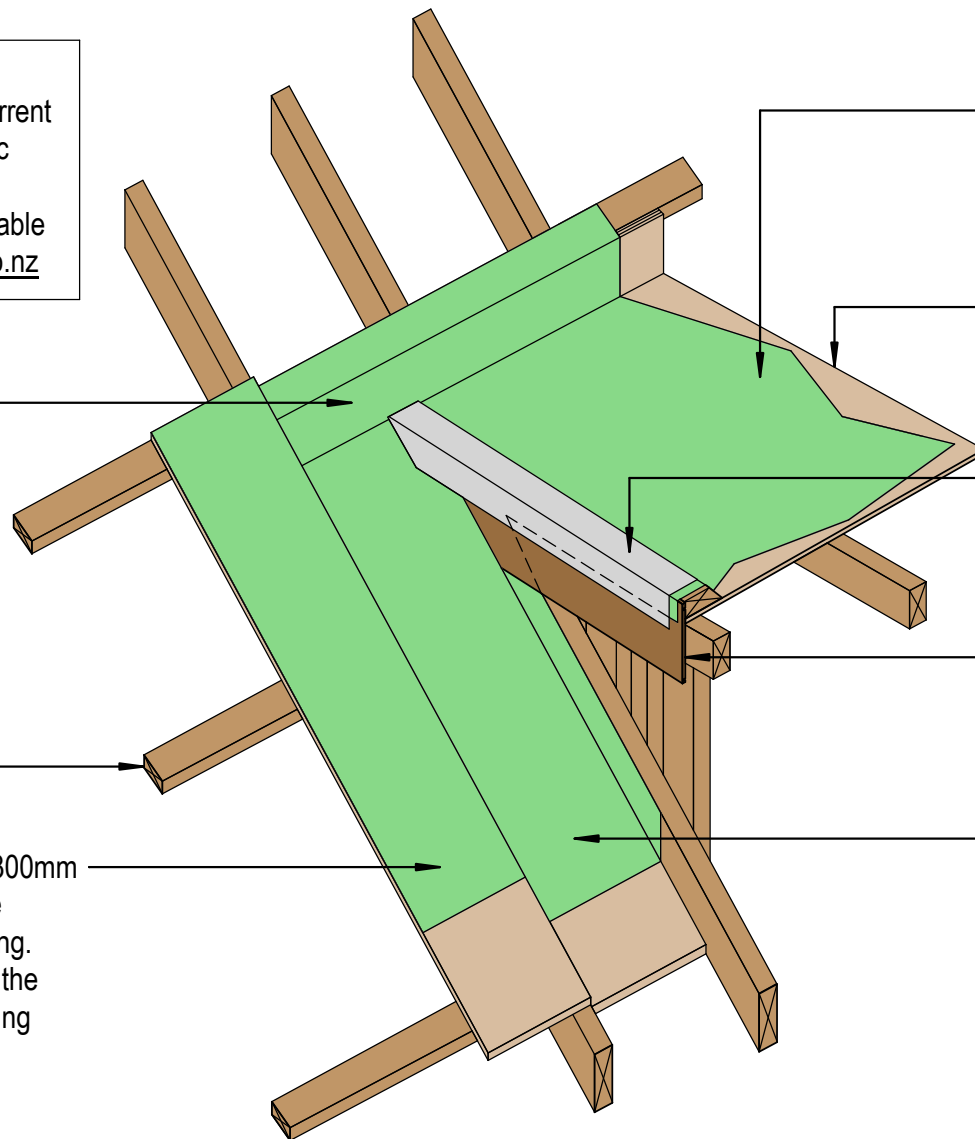

Viking Enviroclad TPO
 waterproofing membrane 1.52
 mm thick, install as per
 manufacturers instructions.

Substrate

Refer detail ENV_074A
 Install membrane before Barge-board
 is installed, then addition membrane to
 finish over the Barge-board and / or
 install a metal cap.

Barge board

Viking Enviroclad membrane into
 gutter, return membrane up wall
 and behind cladding 150mm Min.
 upstand, continue membrane
 behind barge board

Refer detail ENV_070

Purlin over trusses

Continue membrane onto a 300mm
 wide flood-board down to the
 bottom drip-edge and Spouting.
 Form a hemmed edge along the
 membrane, under metal roofing

DRAWING TITLE

Viking Enviroclad
 Roof Junction_Dormer ISO

NOTES:

* Angle fillets are not required at
 upstands for Enviroclad
 * All fixings, cladding and structure are
 indicative only unless notated

CodeMark

Cert # GM-CMNZ30058

Cert # BV-CMNZ70176

Enviroclad systems are CodeMarked

DRAWING

INFORMATION ONLY

Scale: Not to Scale Date: 23/11/2020 Drawn: Viking

Detail Ref: **VIK_ENV_074_RJUNDORM**

Viking Roofspec
 Taking care of detail