


To install Overflow outlet, cut out the blind base and plumb independent of main storm-water.
 Overflow should high-light blockage of the outlet.

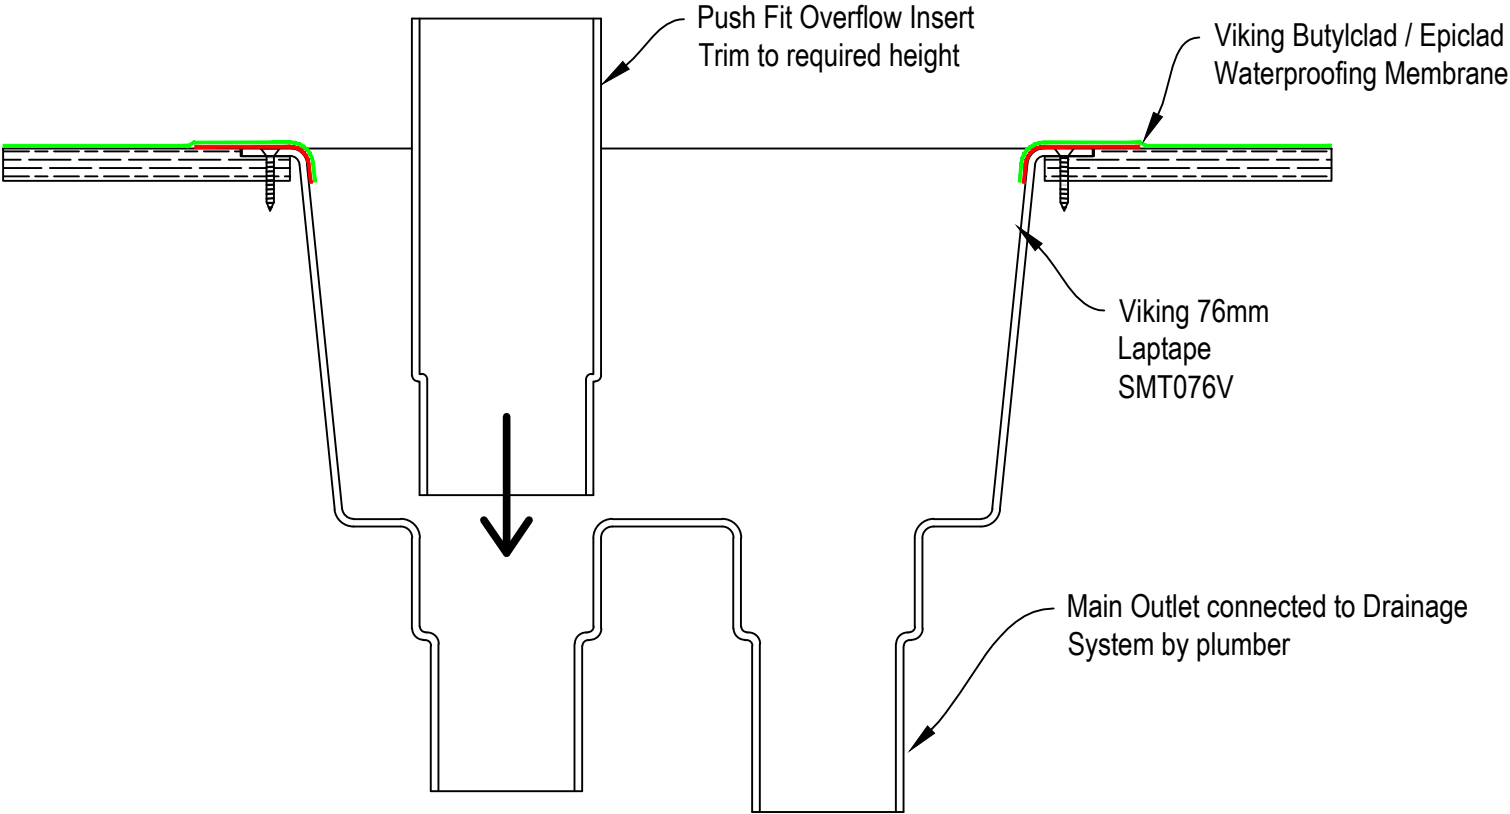

DRAWING TITLE
BE23 Butylclad / Epiclad Sump Outlet with Overflow

NOTES:
1/ Substrate Indicative Only 2/ All external corners / edges require 5mm min. radius

DRAWING STATUS		
INFORMATION ONLY		
Not to Scale	DATE 29/3/2016	Detail Ref.
DRAWN	Viking	BE23 A
SERIES	1.10	