


STEP 1
Take Dec-K-ing membrane up wall min. 100mm and cut on 45° angle to corner



STEP 2
Flash over with matching colour Dec-K-ing External Corner weld to main sheet

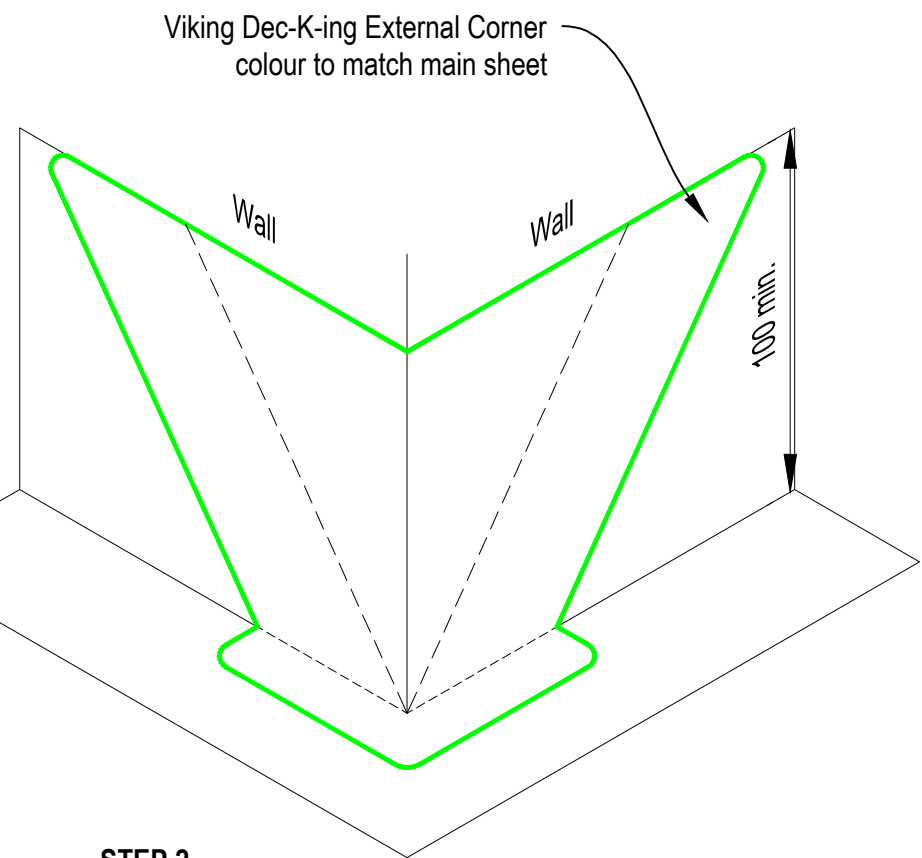

DRAWING TITLE
DK09 Dec-K-ing External Corner

NOTES:
1/ Substrate Indicative Only 2/ No fillets required at upstands for Dec-K-ing

DRAWING STATUS		
INFORMATION ONLY		
Not to Scale	DATE 29/4/2015	Detail Ref.
DRAWN Viking		DK09 A
SERIES 1.10		